


Guidelines

- Maximum weight: 60 lb per bike
- Compatible with RockyMounts™ DriveShaft Track, HotRod and LoBall series bike mounts
- After loading a bicycle, shake fork side to side to ensure assembly is tight and secure
- Not recommended for use on trailers
- Not intended for offroad use
- Trimming may be required for trucks with spay-on bedliners

Parts Included

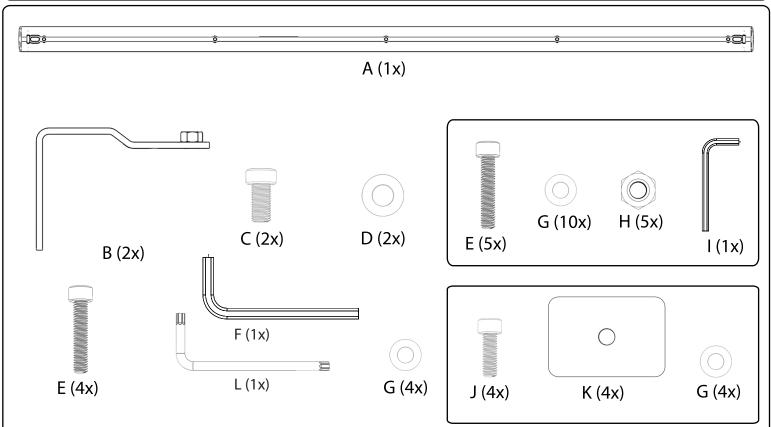





Assembly Instructions

1 Install Mounting Brackets

Unscrew M6 bolts and remove each front tie down cleat using T30 torx wrench. Reinstall each tie down cleat over a mounting bracket with two M6x30 Allen bolts and two M6 washers, using M5 Allen wrench.

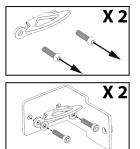




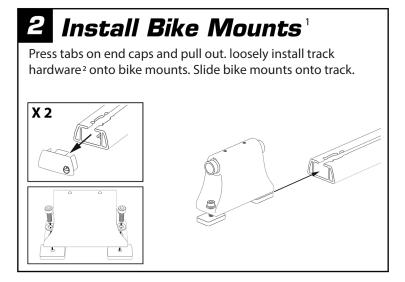


3 Install Track

Reinstall two end caps. Install track to mounting brackets using an M8x16 Allen bolt with an M8 washer on each side.

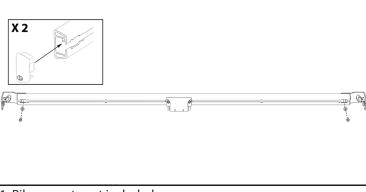

4 Tighten Bike Mounts

Slide bike mounts to desired location and tighten all bolts. Bike mounts should be secure and not move after tightened

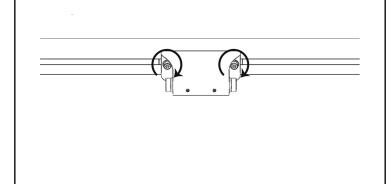

- 1. Bike mounts not included.
- 2. Track hardware provided: M6x18 Allen bolt (x4), M6 Flat Washer (x4), Track Plate (x4)

Warnings

Remove Baby Seats, Panniers, U-Locks, or items that could detach from bicycle.

Check all fastenings before each use.

Once a year, remove track from car. Clean and inspect for damage.

Remove bikes before entering a car wash.

Limited Lifetime Warranty

At RockyMounts[™] we offer a Limited Lifetime Warranty for products purchased after January 1, 2014 to the original owner. For details of the Warranty, guidelines, and how to make a claim please see rockymounts.com/warranty

Technical Support

Please call us at 303-402-0190 or email at ride@rockymounts.com for questions regarding use, assembly, and support

Read all warnings on last page before use. **rocky**mounts